

Sennheiser ME3 Microphone

Congratulations on your purchase of a Sennheiser ME3 Microphone!


This is an extremely high quality and durable microphone that provides excellent accuracy and noise cancelation when used with speech recognition software. This microphone is not compatible with all PC sound cards and is often best used with an external sound adapter.

Using the ME3 with an Andrea USB Sound adapter:

1. Plug the sound adapter into an available USB port; drivers will be automatically installed
2. If using this set-up with Dragon NaturallySpeaking, it is necessary to select the Andrea USB adapter as your preferred audio device:
 - a. Be sure the USB adapter is connected and drivers already installed
 - b. In Dragon navigate to Tools > Accuracy Center > Check Your Audio Settings
 - c. Under the audio devices, select "AK5370" if using Windows XP and "USB Audio Device" if using Windows Vista.
 - d. (Do not click on the "Default Button")
 - e. Click next and continue with the Audio Set-up wizard



Mounting the microphone to your head: In general, the velcro strap offers no particular function and can be discarded. Mounting of the microphone is not always intuitive. The two semicircular portions of the microphone are designed to go over your ears, with the mic boom extending from the portion near your right ear and the band going around the back of your head (not over the top of your head). For more help, see the adjacent figure.

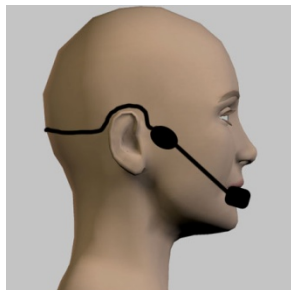

Positioning: The foam covered microphone element should be about $\frac{1}{2}$ to $\frac{3}{4}$ of an inch from the right front of your mouth, and ideally to the side of your mouth. If necessary, bend the flexible boom to get the proper position. If you get warnings of excessively high or low sound levels when performing the Audio Set-up Wizard with NaturallySpeaking, simply move the microphone slightly further away or closer as appropriate.

Warranty: 2-year Sennheiser warranty.